

PL KARTA INSTALACYJNA

Minimalna odległość pomiędzy blatem kuchenki, na którym ustawiane są naczynia, a najniższą częścią okapu NIE MOŻE BYĆ mniejsza niż 50 cm w przypadku kuchenki elektrycznej oraz 70 cm w przypadku kuchenki gazowej lub mieszanej.

Jeżeli w instrukcjach instalacji kuchenki gazowej przewidziana została większa odległość w stosunku do odległości tutaj wskazanej, należy ją zastosować.

W sprawie instalacji skonsultować się z wykwalifikowanym technikiem. Podczas montażu należy przestrzegać kolejności numeracji (1⇒2⇒3⇒.....).

⚠ OSTRZEŻENIE: Przed przystąpieniem do podłączenia elektrycznego okapu należy odłączyć zasilanie elektryczne.

⚠ OSTRZEŻENIE: Należy sprawdzić, czy w zestawie dostarczono rurę wylotową i zaciski. Jeśli nie, należy je zakupić oddzielnie.

Uwaga: Części oznaczone symbolem “(*)” stanowią akcesoria opcjonalne, dostarczane tylko z niektórymi modelami, bądź części nie dostarczane, które należy zakupić oddzielnie.

⚠ OSTRZEŻENIE: Urządzenie jest ciężkie. Przenoszenie i instalacja okapu powinny być wykonywane przez co najmniej dwie osoby.

CZ POPIS INSTALACE

Minimální vzdáenosť mezi plotýnkami nádob na sporáku a nejnižší časťí kuchyňského odsávače NESMÍ BYŤ MENŠÍ NEŽ 50 cm u elektrických sporákov a 70 cm u sporákov na plyn nebo kombinovaných sporákov.

Jestliže je v pokynech k instalaci plynového spotřebiče určena větší vzdáenosť, než je vzdáenosť uvedená, je nutné ji dodržet.

Při instalaci doporučujeme poradit se s kvalifikovaným technikem. Při montáži sledujte číslování (1 ⇒ 2 ⇒ 3 ⇒.....).

⚠ VAROVÁNÍ: Před elektrickým připojením odsávače odpojte domácí elektrickou síť.

⚠ VAROVÁNÍ: Ověřte si, zda je odtahová trubka a připravňovací pásky součástí dodávky. Není-li tomu tak, je nutné je zakoupit samostatně.

Poznámka: Díly označené symbolem “(*)” jsou volitelným příslušenstvím, které se dodává pouze k některým modelům, nebo se vůbec nedodává, a je nutné je zakoupit.

⚠ VAROVÁNÍ: Vzhledem k tomu, že je odsávač par velmi těžký, musí jeho stěhování a instalaci provádět nejméně dvě osoby.

SK INŠTALAČNÁ SCHÉMA

Minimálna vzdialenosť medzi plochou varnej dosky a najnižšej časti odsávača pár NESMIE BYŤ MENŠIA ako 50 cm v prípade elektrickej varnej dosky a 70 cm v prípade plynovej alebo kombinovanej varnej doske.

Ak pokyny na inštaláciu plynovej varnej dosky určujú väčšiu vzdialenosť ako je špecifikovaná, dodržiavajte ich.

Pri inštalácii sa poradte s kvalifikovaným technikom. Pri montáži postupujte podľa číslíc (1⇒2⇒3⇒.....).

⚠ VAROVANIE: Pred vykonaním elektrického zapojenia odsávača pár vypnite spínač elektrickej siete v domácnosti.

⚠ VAROVANIE: Skontrolujte, či výbava odsávača obsahuje odvodnú rúru a upevňovacie svorky. V opačnom prípade ich musíte kúpiť.

Upozornenie: Diely označené symbolom “(*)” predstavujú doplnkové príslušenstvo, ktoré sa dodáva iba pri niektorých modeloch alebo sú to časti, ktoré treba zakúpiť.

⚠ VAROVANIE: Výrobok má nadmernú hmotnosť, preto je nevyhnutné, aby ho prenášali a inštalovali aspoň dve alebo viac osôb.

H ÜZEMBE HELYEZÉSI ÚTMUTATÓ

A konyhai elszívó legalacsonyabb része és a főzöberendezésen kialakított edényfelület közötti távolságnak elektromos tűzhely esetén legalább 50 cm, gáz- vagy vegyes tűzhely esetén pedig legalább 70 cm NAGYSÁGÚNAK KELL LENNIE.

Amennyiben a gáztűzhely üzembe helyezési útmutatója nagyobb távolságot ír elő, úgy azt kell betartani.

Az üzembe helyezést szakemberrel végeztesse. A felszereléshez kövesse a számosztást (1⇒2⇒3⇒.....).

⚠ FIGYELMEZTETÉS: A készülék elektromos hálózatra való csatlakoztatása előtt kapcsolja ki a háztartás elektromos hálózatát.

⚠ FIGYELMEZTETÉS: Ellenőrizze, hogy az elvezető cső és a rögzítőpántok a készülék tartozékaiból. Ellenkező esetben ezeket külön kell megvásárolni.

Megjegyzés: A “(*)” jelzésű alkatrészek olyan opcionális tartozékok, amelyek csak néhány modellhez járnak, illetve amelyeket külön meg kell vásárolni.

⚠ FIGYELMEZTETÉS: Nagy súlya miatt a készülék mozgatását és üzembe helyezését legalább két vagy több személynek kell végeznie.

RUS СХЕМА УСТАНОВКИ

Минимальное расстояние между опорной поверхностью для посуды на плите и самой нижней частью вытяжки ДОЛЖНО СОСТАВЛЯТЬ НЕ МЕНЕЕ 50 см в случае электрических плит и не менее 70 см в случае газовых или комбинированных плит. Если инструкциями по установке газового прибора предусмотрено большее расстояние, то данное указание должно быть соблюдено.

При выполнении монтажа проконсультируйтесь с квалифицированным специалистом. Последовательность действий при монтаже должна соответствовать нумерации (1⇒2⇒3⇒.....).

⚠ ОСТОРОЖНО: Перед выполнением этой операции отсоедините вытяжку от сети электропитания.

⚠ ОСТОРОЖНО: Проверьте, входят ли в комплект поставки выпускная труба и крепежные зажимы. В противном случае необходимо приобрести их отдельно.

Примечание: детали, отмеченные символом “(*)”, представляют собой дополнительные принадлежности, поставляемые только в некоторых моделях или не включаемые в комплект поставки. В последнем случае эти детали приобретаются отдельно.

⚠ ОСТОРОЖНО: устройство отличается большим весом; для его переноски и установки требуется участие не менее двух человек.

BG КАРТА ЗА ИНСТАЛИРАНЕ

Минималното разстояние между опорната повърхност на съдовете върху устройството за готвене и най-ниската част на кухненския аспиратор НЕ ТРЯБВА ДА БЪДЕ по-малко от 50 см за електрически печки и 70 см - за печки на газ или комбинирани.

Ако в инструкциите на устройството за готвене на газ е указано по-голямо разстояние за тази спецификация, трябва да се изпълнява това разстояние.

За инсталацирането се посъветвайте с квалифициран техник. При монтажа, следвайте номерацията (1⇒2⇒3⇒.....).

⚠ ВНИМАНИЕ: Преди да извършите свързването на аспиратора към електрическата мрежа, изключете електрозахранването.

⚠ ВНИМАНИЕ: Проверете дали тръбата за отвеждане и скобите за фиксиране са приложени в комплекта. В противен случай те трябва да се закупят.

Забележка: Частите, означени със символа “(*)”, са допълнителни принадлежности, които са включени само към някои модели, или части, които се закупуват допълнително.

⚠ ВНИМАНИЕ: Уредът е с много голямо тегло, преместването и инсталацирането на аспиратора трябва да се извърши от най-малко от двама или повече души.

RO FIŞA DE INSTALARE

Distanţa minimă între suprafaţa de sprijin a recipientelor de pe maşina de gătit şi partea cea mai joasă a hotei de bucătărie NU TREBUIE SĂ FIE mai mică de 50 cm în cazul plitelor electrice şi de 70 cm în cazul plitelor cu gaz sau mixte.

Dacă instrucţiunile de instalare ale maşinii de gătit cu gaz specifică o distanţă mai mare decât cea indicată, trebuie să ţineţi cont de ea.

Consultaţi un tehnician calificat pentru instalare. Pentru montaj urmaţi numerotarea (1⇒2⇒3⇒.....).

⚠ ATENȚIE: Deconectaţi hota de la reţeaua electrică a locuinţei înainte de a efectua racordarea electrică a hotei.

⚠ ATENȚIE: Verificaţi dacă tubul de evacuare şi manşoanele de fixare sunt furnizate în dotare. În caz contrar, trebuie cumpărate separat.

Notă: Elementele marcate cu simbolul “(*)” sunt accesorii opţionale furnizate doar la unele modele sau sunt elemente care nu sunt furnizate, ci trebuie cumpărate.

⚠ ATENȚIE: Produs cu greutate mare, deplasarea şi instalarea hotei trebuie efectuate de cel puţin două sau mai multe persoane.

GB INSTALLATION SHEET

The minimum distance between the support surface of the recipients on the cooking device and the lowest part of the hood must not be less than 50 cm in case of electric cookers and 70 cm for gas or combination cookers.

If the installation instructions for a gas cooker specify a greater distance, then this distance must be observed.








Contact a qualified technician for installation. To install, follow steps (1⇒2⇒3⇒.....).




⚠ WARNING: Disconnect the power at the house main switch before electrically connecting the hood.

⚠ WARNING: Check if the exhaust pipe and fixing clamps are provided. Otherwise, they must be purchased separately.


Note: Parts marked with the symbol “(*)” are optional accessories supplied only with some models or parts not supplied, to be purchased separately.

⚠ WARNING: Very heavy product; hood handling and installation must be carried out by at least two persons.

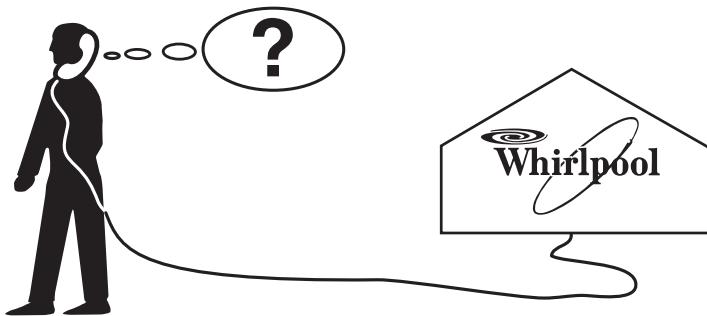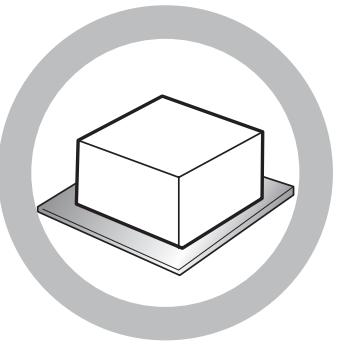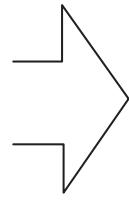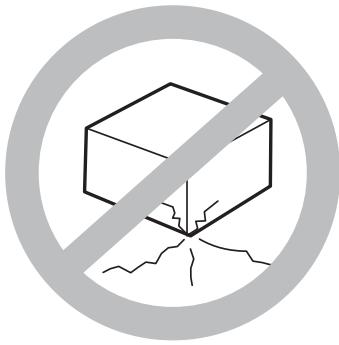
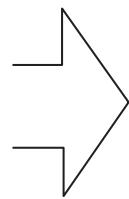
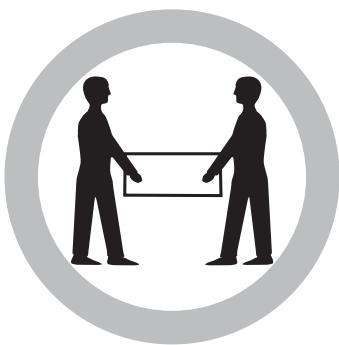
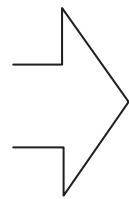


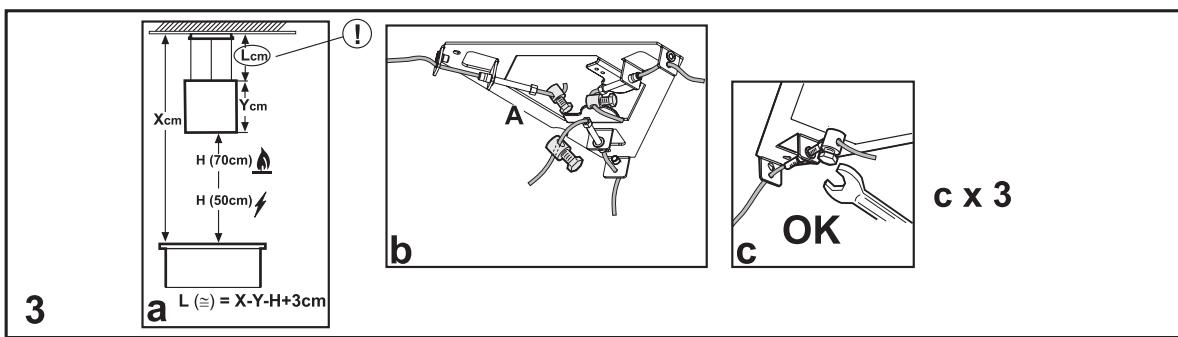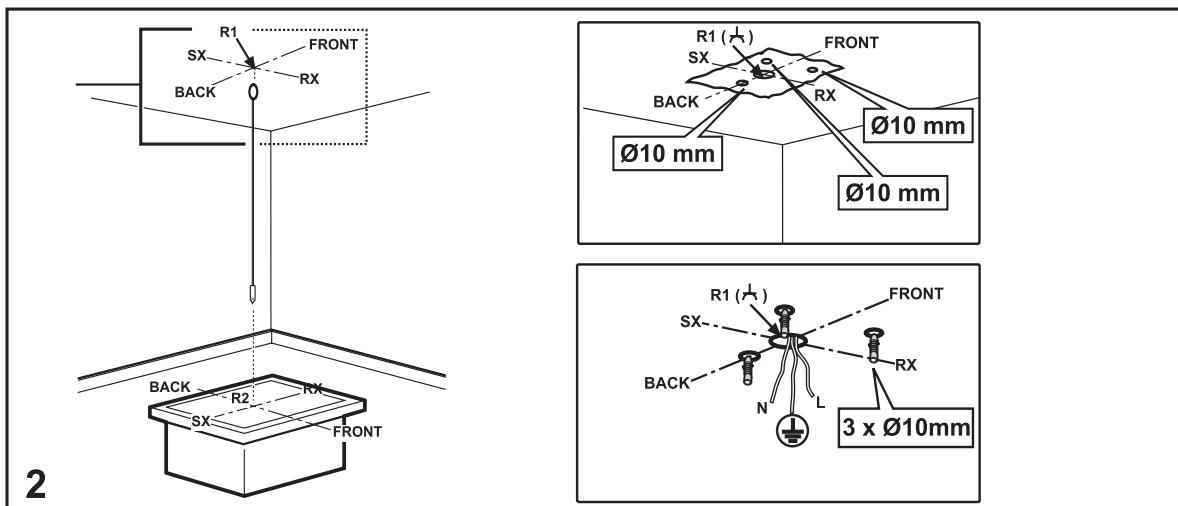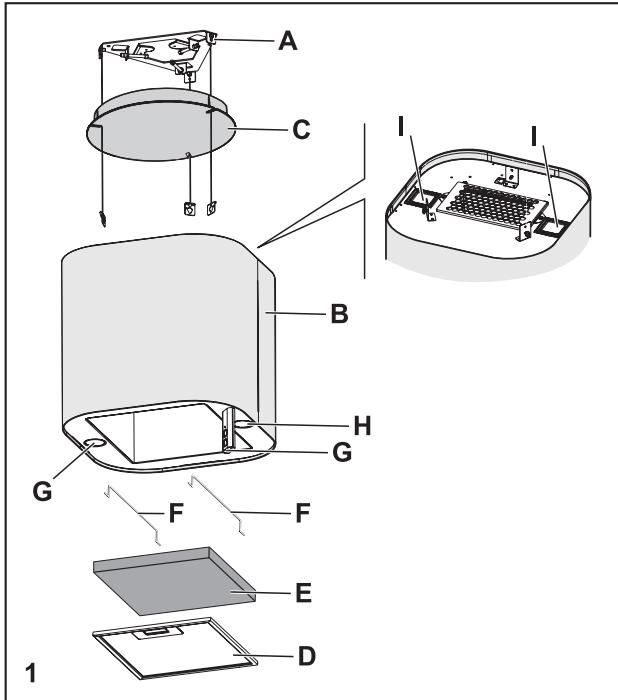



4

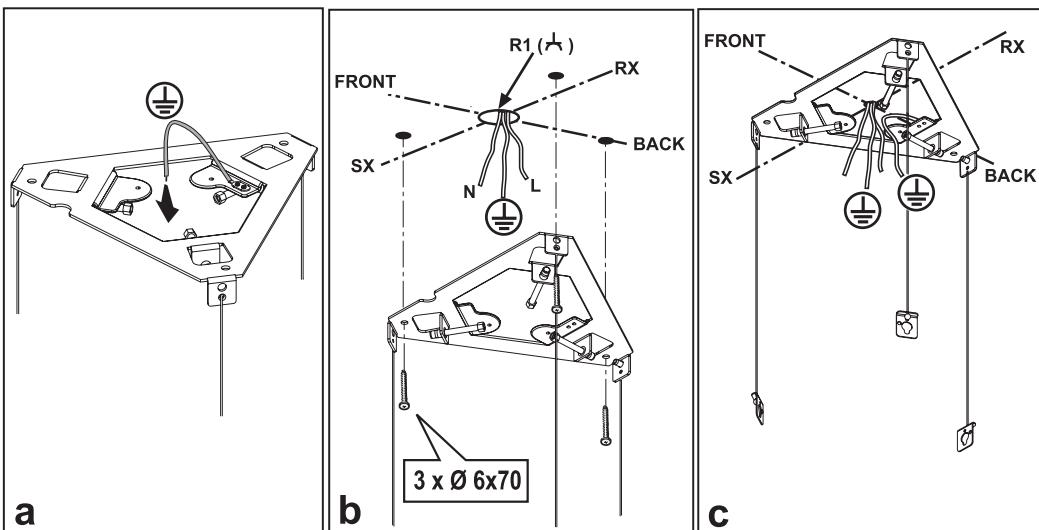


a-b-c **a-b-c** **a-b-c**

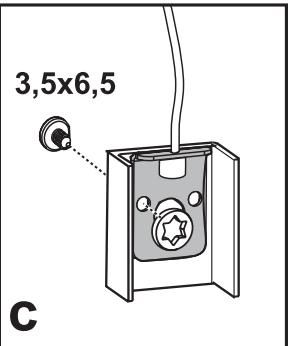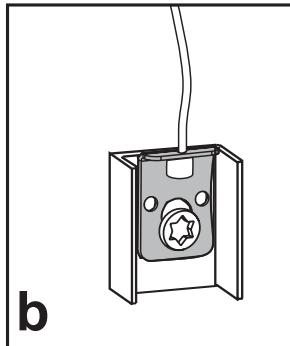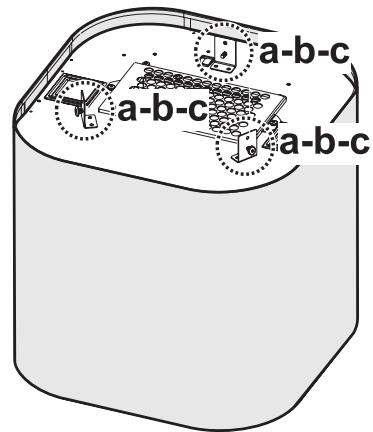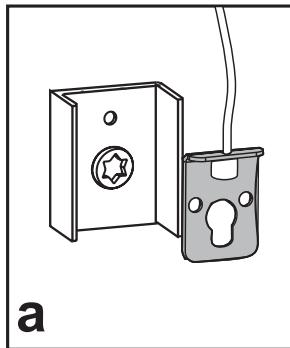




5

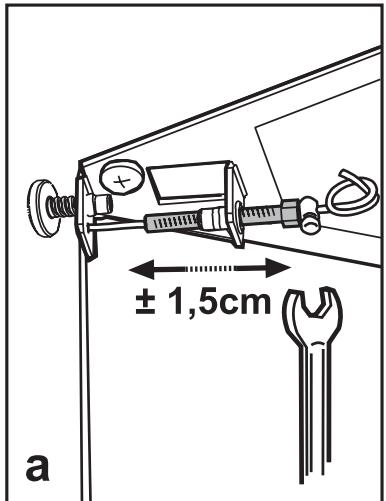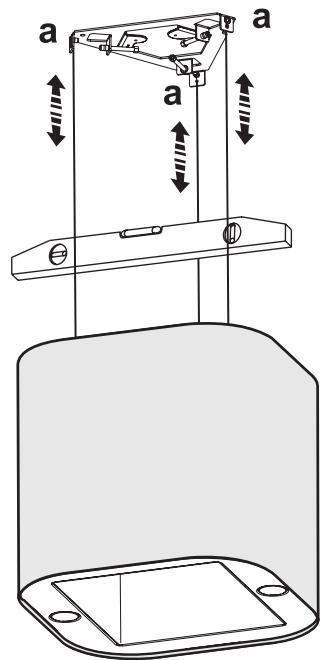


6

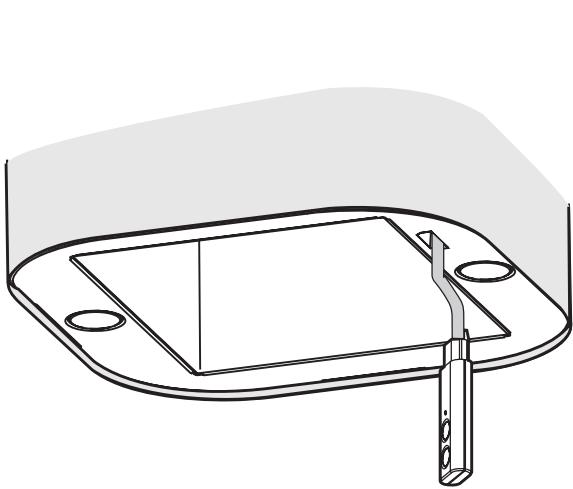


7

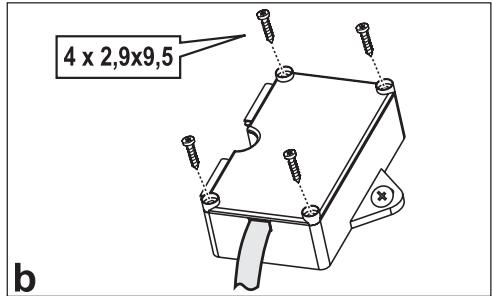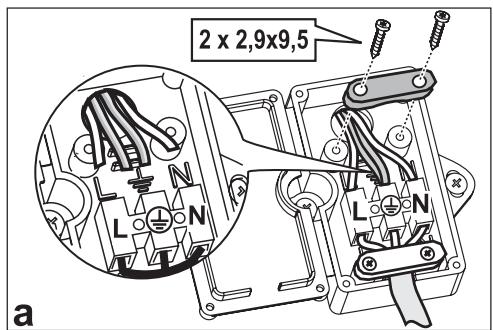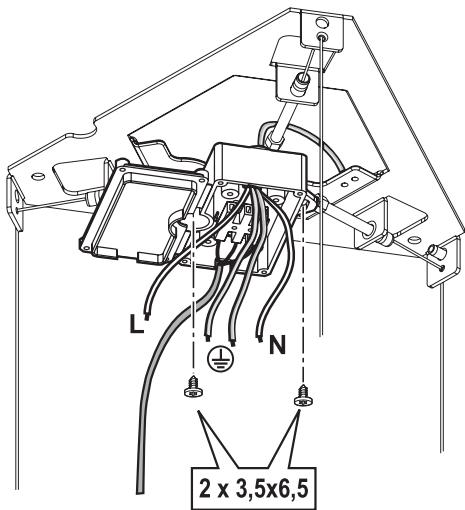

8

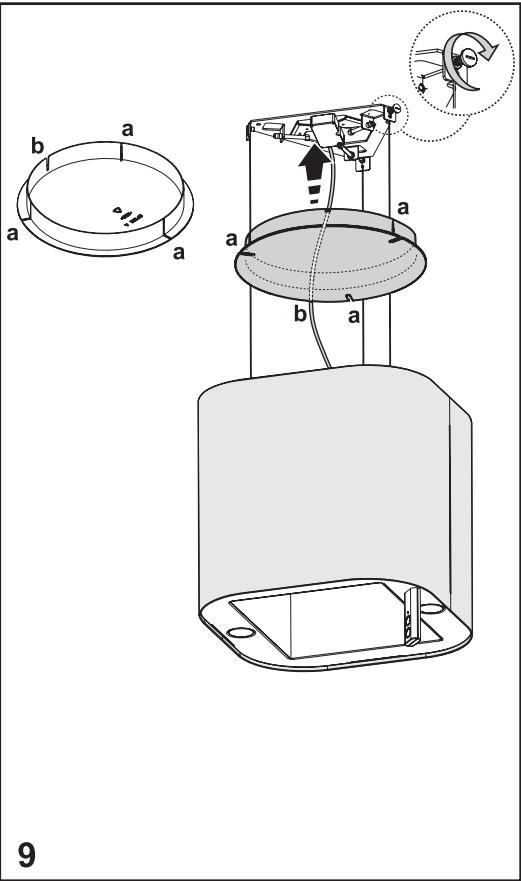

9

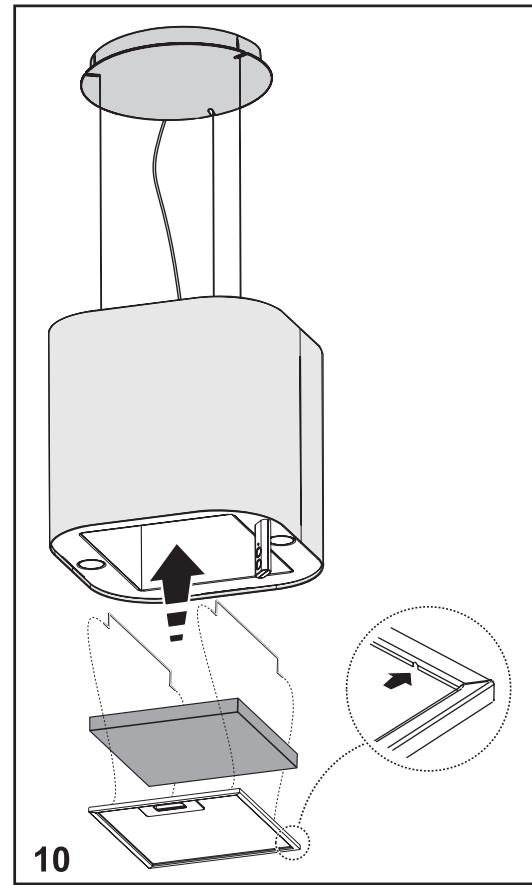

10

SAFEGUARDING THE ENVIRONMENT

1. Packing

Packing materials are 100% recyclable and are marked with the recycling symbol . Comply with the local regulations for disposal. The packing materials (plastic bags, polystyrene, etc.) are a potential source of danger and must be kept out of the reach of children.

2. Product

This appliance is marked in compliance with European Directive 2002/96/EC, Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is correctly scrapped, the user can help prevent potentially harmful consequences for the environment and the health of people.

The symbol on the product or the accompanying documentation indicates that this product should not be treated as domestic waste but must be taken to a suitable collection centre for the recycling of electrical and electronic equipment. Disposal must be carried out in compliance with local regulations on waste disposal.

For further information on the treatment, recovery and recycling of this product, contact the competent local office, the household waste collection service or the shop where you purchased the appliance.



IMPORTANT INSTRUCTIONS FOR SAFETY

WARNING: To reduce the risk of accidents, electric shock, injury or damage, when using the hood comply with the basic precautions, including the following.

1. Always disconnect the hood from the power supply before carrying out any installation or maintenance operation on the appliance.
2. Installation must be carried out by a specialised technician, in compliance with the manufacturer's instructions and local safety regulations.
3. Earthing of the appliance is compulsory. (Not possible for Class II hoods).
4. Never use multisockets and extension leads.
5. The electrical components must no longer be accessible to the user after installation.
6. Do not touch the hood with wet parts of the body or use it when barefoot.
7. Do not pull the appliance power cable to unplug it.
8. After-sales service – do not repair or replace any part of the hood unless specifically indicated in the manual. All other maintenance services must be carried out by a specialised technician.
9. When drilling the wall, make sure not to damage the electrical connections and/or pipes.
10. The ventilation ducts must always discharge to the outside.
11. The Manufacturer declines any liability for improper use or incorrect setting of the controls.

12. The appliance is not intended for use by children or persons with limited physical, sensory or mental abilities or without experience and knowledge of it, unless they are under the supervision of or instructed in its use by a person responsible for their safety.
13. Keep children away.
14. To reduce the risk of fire, only use a metal inlet duct.
15. Children must be supervised so that they do not play with the appliance.
16. The product must be disposed of in compliance with local regulations on waste disposal.
17. For further information on the treatment, recovery and recycling of this product, contact the competent local office, the household waste collection service or the shop where you purchased the appliance.
18. Regular cleaning and maintenance is essential for correct hood operation and good performance. Frequently clean all encrustations from dirty surfaces to prevent the accumulation of grease. Regularly clean or replace filters.
19. Do not "flambé" food under the hood. Naked flames could cause a fire.
20. The room must have adequate ventilation when the hood is used at the same time as appliances operating on gas or other fuels.
21. The discharge air must not be eliminated in a duct used to remove fumes produced by appliances operating on gas or other fuels, but must have a separate outlet. All the national regulations on air discharge envisaged by art. 7.12.1 of CEI EN 60335-2-31 must be observed.
22. If the hood is used together with other appliances operating on gas or other fuels, the negative pressure in the room must not exceed 4 Pa ($4 \times 10^{-5} \text{ bar}$). Therefore, make sure the room is adequately ventilated.
23. Do not leave pans unattended when frying, since the cooking oil could catch fire.
24. Make sure the lamps are cold before touching them.
25. The hood is not a shelf, therefore do not overload or place objects on it.
26. Do not use or leave the hood without its lamps correctly installed - risk of electric shock.
27. Wear work gloves for all installation and maintenance operations.
28. The product is not suitable for outdoor use.
29. The air sucked by the hood must not be eliminated through the same flue of the heating system or other appliances using gas or other fuels.

Electrical connection

The mains voltage must match that given on the rating plate located inside the hood. If provided with a plug, connect the hood to a socket complying with the current regulations and located in an accessible area. If it does not have a plug (direct connection to the power supply) or if the plug is not in an accessible place, fit a suitable double-pole switch that ensures complete disconnection from the power supply in category III overvoltage conditions, complying with the installation rules.

WARNING: Before reconnecting the hood circuit to the power supply and checking correct operation, always make sure the power cable is correctly fitted and that it was NOT crushed in its housing during installation. Make sure to have this operation carried out by a specialised technician.

Cleaning the hood

WARNING! Failure to remove oil/grease (at least once a month) could result in fire.

Use a soft cloth with a neutral detergent. Never use abrasive substances or alcohol.

Before using the hood

Please read these instructions carefully and keep them for future reference, in order to ensure best use of your hood.

The packing materials (plastic bags, polystyrene, etc.) are a potential source of danger and must be kept out of the reach of children.

Make sure the hood has not been damaged during transport.

Declaration of conformity

This product has been designed, manufactured and put on the market in conformity with:

- safety objectives of the "Low Voltage" Directive 2006/95/EC (which replaces 73/23/EEC as amended)
- protection requirements of "EMC" Directive 89/336/EEC amended by Directive 93/68/EEC.

Troubleshooting guide

If the hood does not work:

- Is the plug properly inserted in the power socket?
- Is there a power failure?

If the hood is not extracting enough:

- Is the right speed selected?
- Do the filters need cleaning or replacing?
- Are the air outlets blocked?

If the lamp does not work:

- Does the lamp need replacing?
- Is the lamp correctly fitted?

AFTER-SALES SERVICE

Before calling the After-Sales Service

1. Check to see if you can fix the problem yourself (see "Troubleshooting Guide").
2. Switch the appliance off and then on again to check if the problem has been eliminated.
3. If the problem persists, contact the After-Sales Service.

Specify:

- the type of fault,
- the product model given on the dataplate inside the hood, visible on removing the grease filters,
- your full address,
- your telephone number and area code,
- the Service code (the number under the word SERVICE on the dataplate inside the hood, behind the grease filter).

If any repairs are necessary, contact an authorised Service Centre (to ensure the use of original spare parts and correct repair).

Failure to comply with these instructions can compromise the safety and quality of the product.


SERVICE



0000 000 00000

DESCRIPTION OF HOOD

- A. Support bracket with cables and hooking brackets
- B. Hood fitted (motor + lights assembly)
- C. Cover
- D. Grease filter
- E. Carbon filter
- F. Carbon filter fixing elements
- G. Control rod
- H. Bottom halogen lamps
- I. Halogen lamps (top)

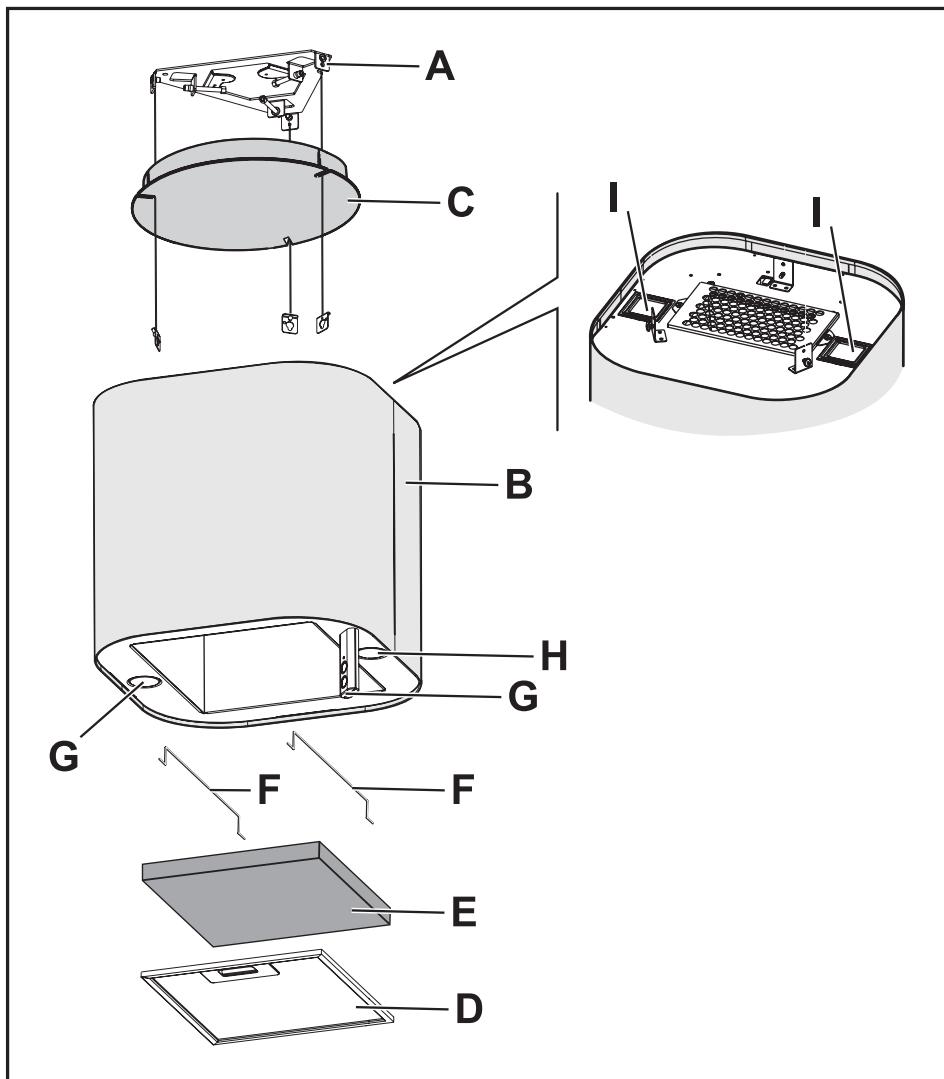


Material supplied

Remove all the components from the packets. Check that all the components are included.

- Hood assembled with motor and lamps installed.
- Support bracket
- Cover
- Assembly template
- Filter/s
- Instruction manual
- 1 - adapter Torx T10
- 1 - adapter Torx T20
- 3 - plugs 10 x 60 mm
- 3 - screws 6 x 70 mm
- 5 - screws 3.5 x 6.5 mm
- 6 - screws 2.9 x 9.5 mm

Installation dimensions

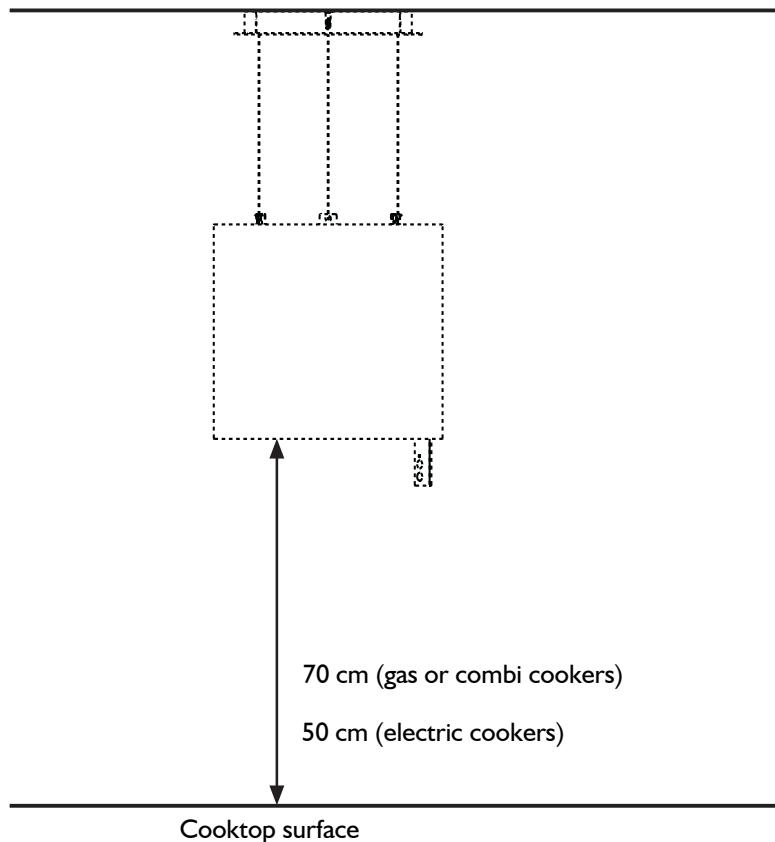



INSTALLATION - ASSEMBLY INSTRUCTIONS

The hood is designed for operation in filter version only: the air is filtered through a carbon filter and recycled in the room.

The hood is supplied with fixing plugs suitable for most types of walls/ceilings. However, it is necessary to contact a qualified technician to ascertain the suitability of the materials according to the type of wall/ceiling. The wall/ceiling must be strong enough to take the weight of the hood.

Fig. 2

Place the template (Fig. 2) supplied on the ceiling directly above the cooktop, matching the centre of the template (**R1**) with the centre of the cooktop (**R2**).

The sides of the template must be parallel to the sides of the cooktop.

Note: The side of the template with the wording "**FRONT**" corresponds to the hood controls side.

Drill the holes indicated on the template, and insert the plugs. Remove the template.

Fig. 3

Prepare the support bracket **A**, suitably adjusting the length of the cables according to the following formula:

$$L \text{ (cm)} = X \cdot Y \cdot H + 3 \text{ cm}$$

L = length of cables.

X = distance between ceiling and the cooktop surface.

Y = height of hood body.

H = minimum installation height between the cooktop surface and bottom part of the hood.

After finding the right length, slide the lock nuts along the cables (**Fig. 3b**) until reaching the required length then clamp them on the cable with a spanner (**Fig. 3c**).

Important: Respect the minimum distance from burners, indicated on the first page of the manual.

Fig. 4

After preparing the electrical connection, fit the support bracket to the ceiling, running the cables for electrical connection through the middle hole

Fix with 3 screws.

Important: Detail A (support bracket) is equipped with a wire (yellow-green) which must be connected to the earth of the house electrical system.

Fig. 5

Fix the hood to the hooking brackets and secure with 1 screw for each bracket (**COMPULSORY FIXING**).

Fig. 6

Adjust the position of the hood by means of the adjustment screws.

Fig. 7

Insert the control rod in the special seat.

Note! Compulsory coupling direction, with release.

Fig. 8

Fix the connection box to the support bracket on the ceiling with 2 screws.

Carry out the electrical connection and secure the cables with the cable clamp and 2 screws.

Fix the connection box cover with 4 screws.

Important: Replacement of the interconnection cable must be carried out by the authorised after-sales technical service.

Fig. 9

Insert the cover **C** between the support cables, making sure they enter the slots provided on the cover.

Important: Leave enough cable so that it passes easily through the slot obtained in the cover.

Secure the cover with 3 grub screws already screwed on the support bracket **A**.

Note: The 3 fixing screws secure the cover by the friction they exert on the cover itself, and therefore must not be completely tightened.

Fig. 10

Fit the carbon filter, on the back of the grease filter, with the special elements **F**. Insert the grease filter + carbon filter assembly on the hood.

PRODUCT SHEET

Control panel

Preliminary information for correct use of the hood:


Use the fastest speed for particularly concentrated cooking steam. It is advisable to switch the hood on 5 minutes before starting to cook and leave it running for another 15 minutes at the end of cooking.

Automatic switching on function

The hood is equipped with a temperature sensor that activates the motor at extraction speed (power) 1 when the ambient temperature in the area surrounding the hood exceeds 70°C.

The user can in any case switch off or change the extraction speed (power) (see section Extraction speed (power) control).

Extraction speed (power) control

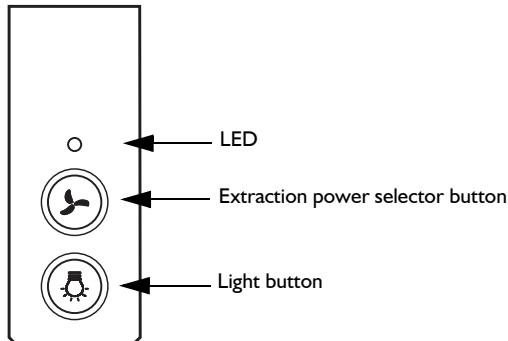

Extraction speed (power) selection is cyclic according to the speed sequence

→ stand-by - 1 → 2 → 3 → 4 →

therefore, every time the "extraction power selection" button is pressed, the extraction speed (power) increases by one level and switches off (Stand-by) if the button is touched again when the hood is on extraction speed (power) 4.

Note: Extraction speed (power) 4 remains on for 5 minutes, after which the extraction motor switches to speed 2.

The hood can also be switched off (Stand-by) when it is on any speed, by prolonged pressing (more than 3 seconds) of the button.

The control panel has a LED that changes colour according to the extraction speed (power), therefore hood extraction speed (power) can be determined as follows:

Hood on stand-by: LED OFF

extraction speed (power) 1 - GREEN LED

extraction speed (power) 2 - ORANGE (amber) LED

extraction speed (power) 3 - RED LED

extraction speed (power) 4 - LED RED FLASHING



Grease filter cleaning required: GREEN LED FLASHING (read the instructions regarding "Reset and configuration of filter saturation signalling")

Carbon filters cleaning or changing required: ORANGE (amber) LED FLASHING (read the instructions regarding "Reset and configuration of filter saturation signalling")

Control of bottom lamps

The bottom light can be switched on or off by pressing the "light button".

Control of top lamps

To switch the top lights on or off, press (PROLONGED) the "light button".

As well as as switching on and off, PROLONGED PRESSING also allows the brightness of the lamps to be adjusted.

Note: The switching on and off (and adjustment) functions alternate.

Reset and configuration of filter saturation signalling

Switch the hood on at any speed (see section above Sterowanie prędkoœci^l (moc^l) wyciœgu)

Reset grease filter saturation signalling (GREEN LED FLASHING on control panel)

Firstly carry out filter maintenance as described in the relevant section.

Press (prolonged for more than 3 seconds) the "extraction power selection" button; the LED stops flashing to indicate that signalling has been reset, and the hood switches off.

Reset carbon filter saturation signalling (ORANGE (amber) LED FLASHING)

Firstly carry out filter maintenance as described in the relevant section.

Press (prolonged for more than 3 seconds) the "extraction power selection" button; the LED stops flashing to indicate that signalling has been reset, and the hood switches off.


Deactivation of carbon filter saturation signalling (for particular applications)

Switch off the hood (refer to section "Extraction speed (power) control")

Press (prolonged for more than 5 seconds) the "extraction power selection" button; the LED flashes GREEN to indicate that carbon filter saturation signalling has been deactivated.

To reactivate carbon filter saturation signalling, repeat the operation, and the LED will flash ORANGE (amber).

PRODUCT SHEET

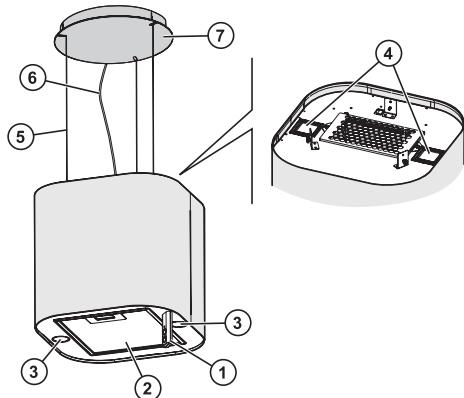

1. Control panel
2. Grease filter
3. Bottom light
4. Top light
5. Support cables
6. Interconnection cable
7. Cover

Maintenance of bottom lamps

1. Disconnect the hood from the power supply.
- WARNING:** Wear gloves.
2. Remove the burnt-out lamp by prising on the edge (**Fig. 1**).
 3. Fit the new lamp (**Fig. 1**).
- WARNING:** Only use halogen lamps 20W max. GU4 - 12V - Ø 35mm - 30° - Dichroic, taking care not to touch them with hands.

Replacing the top lamps

1. Disconnect the hood from the power supply.
- WARNING:** Wear gloves.
2. Press on the lighting unit and open it completely (**Fig. 2**) otherwise it will not close again.
 3. Remove the burnt-out lamp and fit a new one.
- WARNING:** Only use max. 20 W halogen lamps, taking care not to touch them with hands.
4. Close the lighting unit.
- WARNING:** The lighting unit must be completely opened otherwise it will not close again.

Grease filters:

The metal grease filter has an unlimited life and should be washed once a month by hand or in a dishwasher at a low temperature and with short cycle. Cleaning in a dishwasher may cause discolouring of the grease filter, but its filtering efficiency is unaffected.

Grease filter maintenance:

1. Disconnect the hood from the power supply.
2. Remove the grease filter (**Fig. 3**) by pulling the spring release handle.
3. Remove the carbon filter fitted on the grease filter.

Carbon filter maintenance

The carbon filter must be cleaned once a month in a dishwasher at the highest temperature, using a normal dishwasher detergent. Wash the filter on its own. After washing, reactivate the carbon filter by drying it in the oven at 100°C for 10 minutes. Change the carbon filter every 3 years

Fitting the carbon filter:

1. Remove the grease filter (**Fig. 3**) (refer to the section "Grease filter maintenance").
2. Place the carbon filter on the grease filter.
3. Clamp the carbon filter with the special metal catches (**Fig. 4**), to be inserted in the holes obtained in the frame.
4. Reinsert the grease filter complete with carbon filter.

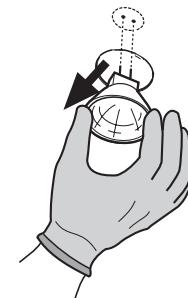


Fig. 1

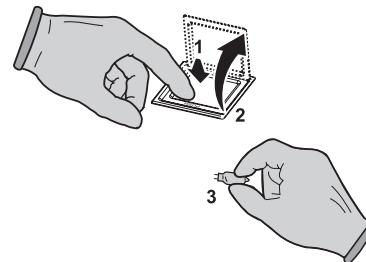


Fig. 2

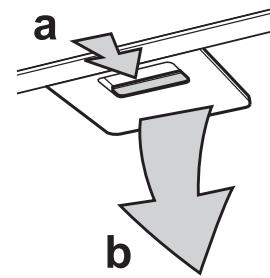


Fig. 3

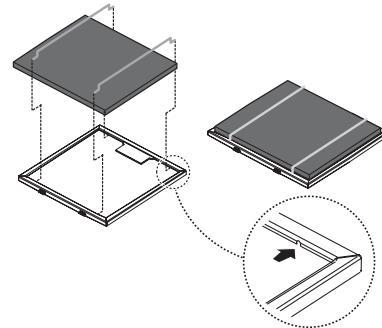


Fig. 4